



FIREPLACE MANTEL

ASSEMBLY INSTRUCTIONS

EFRC378 Jade

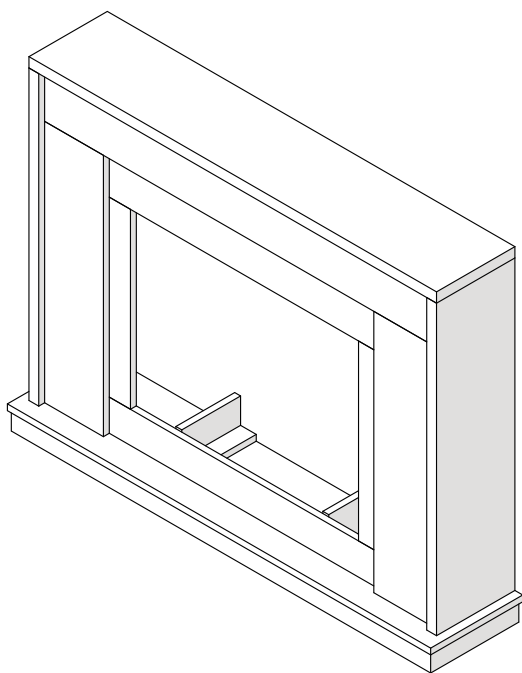


PARTS LIST

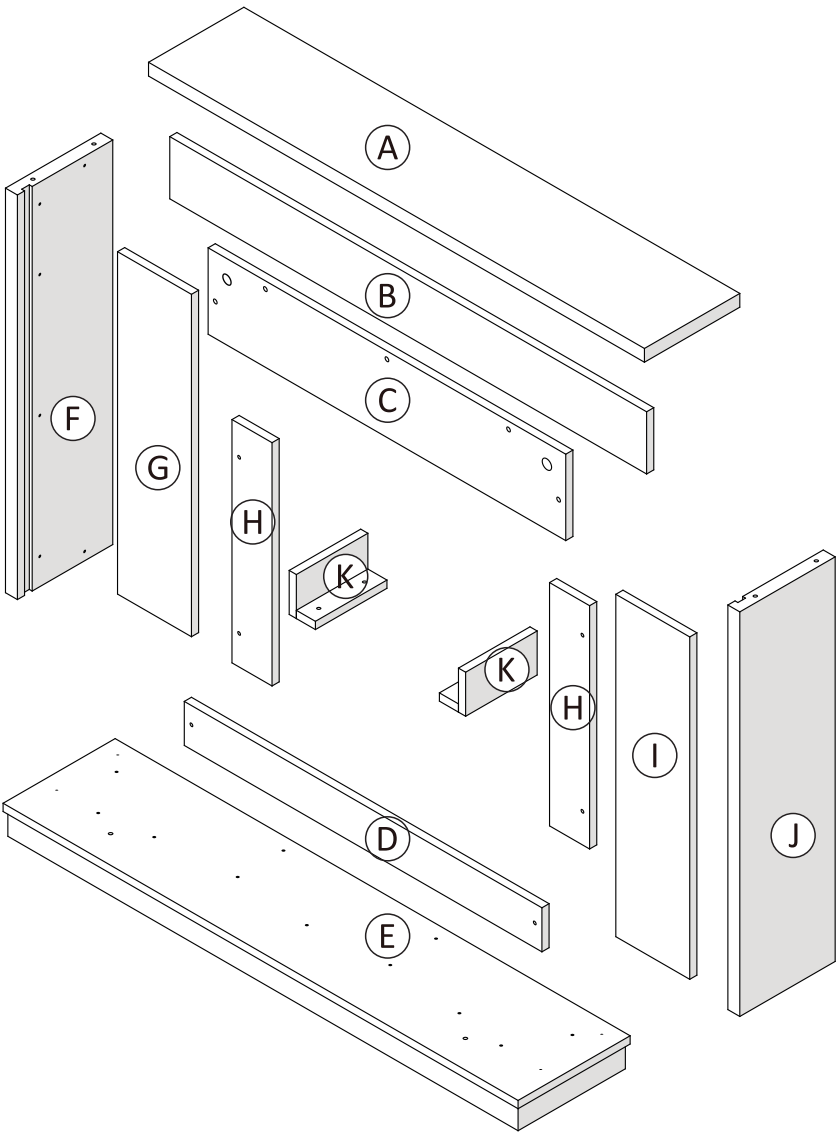







PARTS AND ACCESSORIES

Tools required:


A screwdriver will be needed.

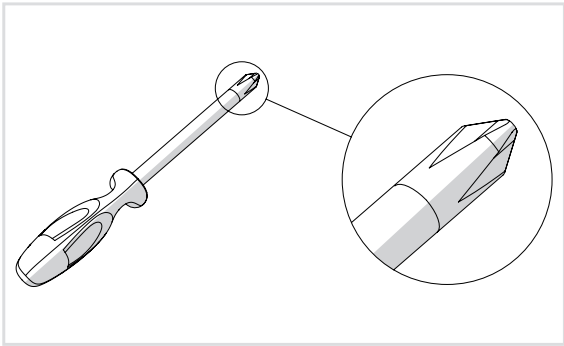

 41 x M6x12mm	 16 x M6x28mm	 11 x ø8x30mm
 16 x	 21 x	 6 x


ASSEMBLY INSTRUCTIONS

01

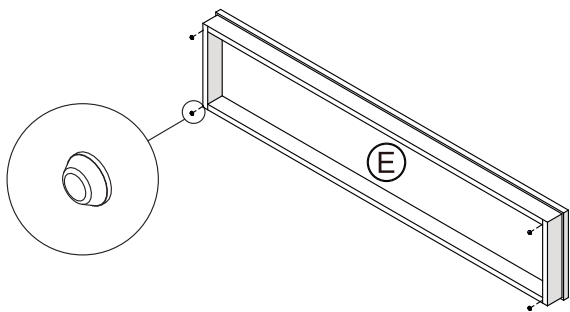


Carry out this assembly step on both sides


02

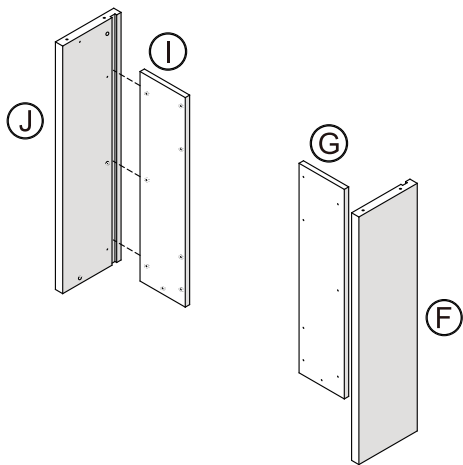


Carry out this assembly step on both sides

03

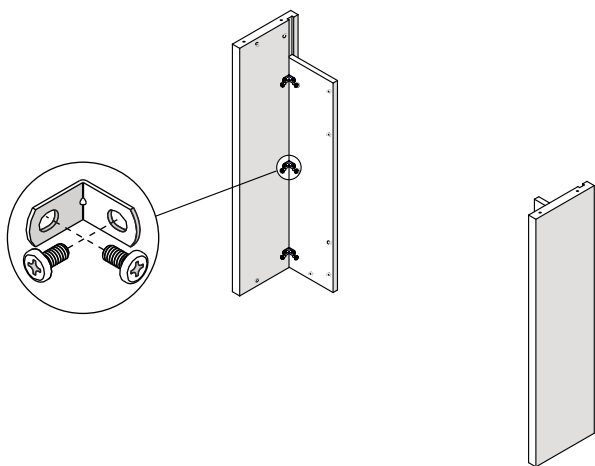




12x
M6x12mm




6x

Carry out this assembly step on both sides

04

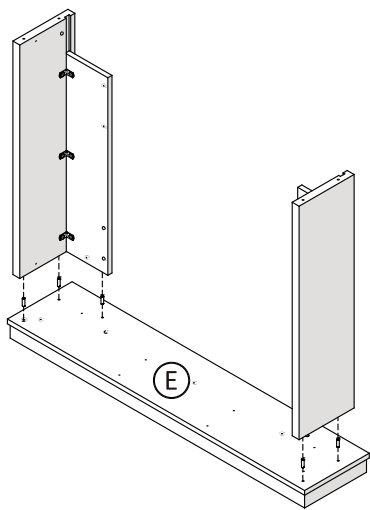




6x
Ø 8x30mm

Carry out this assembly step on both sides

05

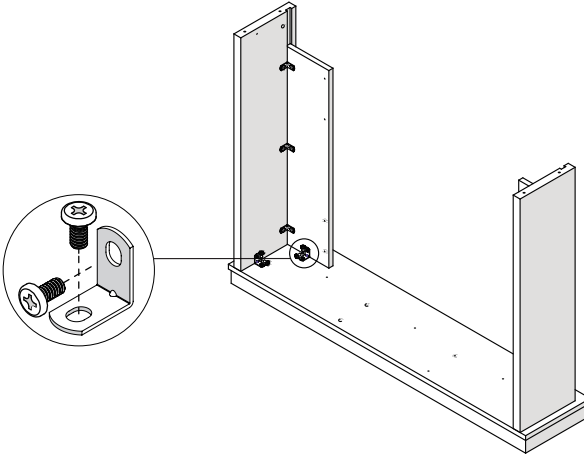

8x




M6x12mm

4x



Carry out this assembly step on both sides

06

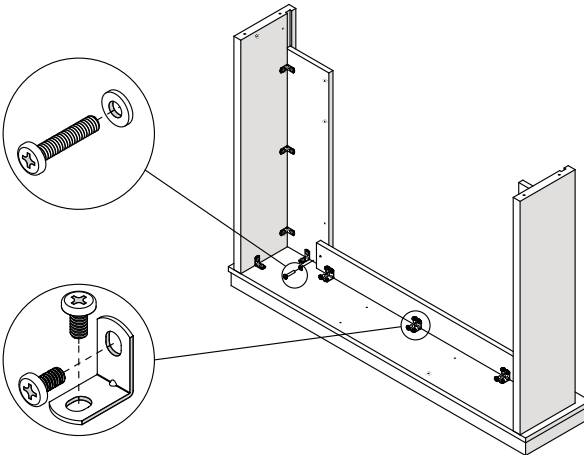

6x



M6x12mm

2x



M6x28mm

3x




2x



Carry out this assembly step on both sides

07

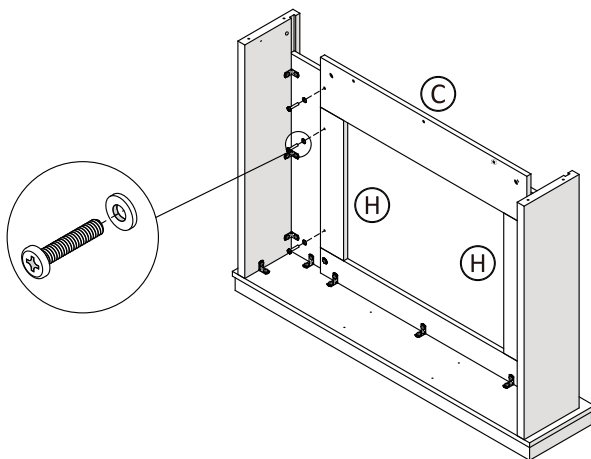

6x


M6x28mm




6x

Carry out this assembly step on both sides

08

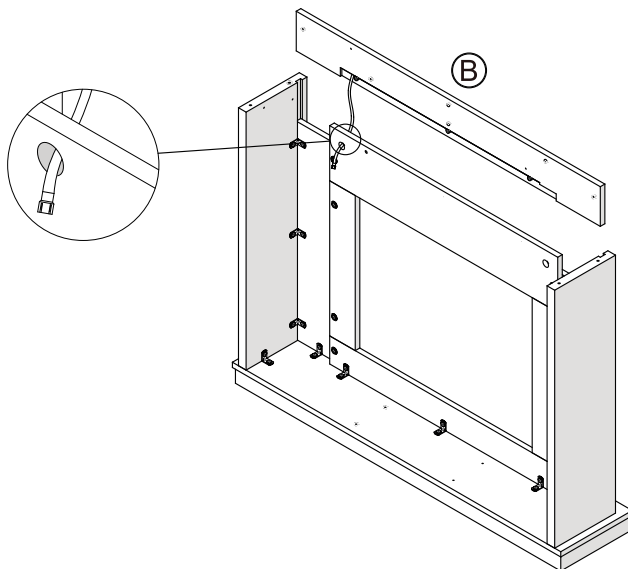

09

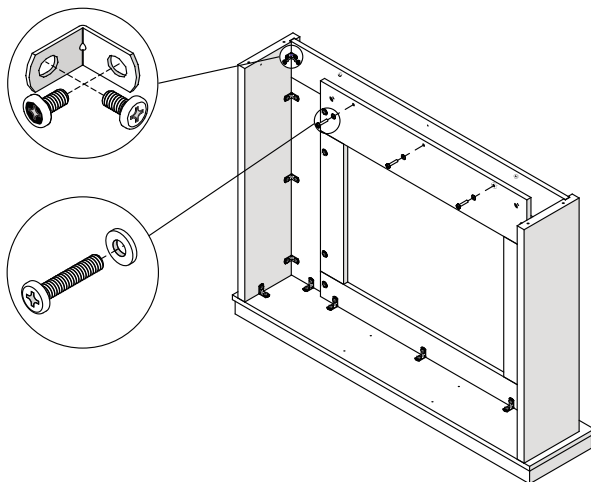

4x



M6x12mm

3x



M6x28mm

2x




3x



Carry out this assembly step on both sides

10

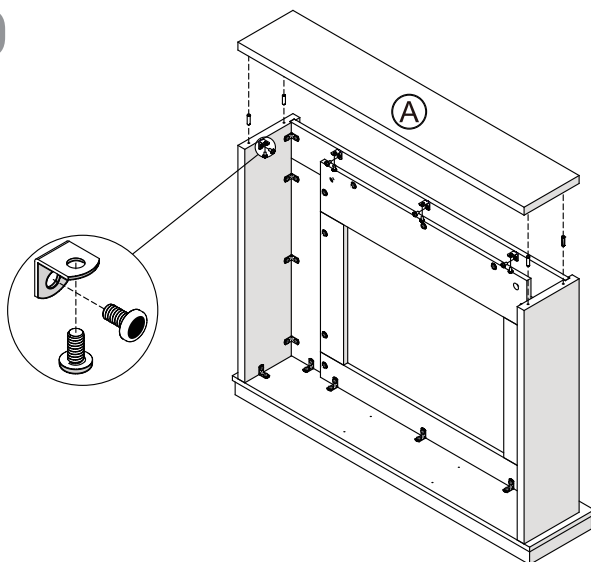

10x



M6x12mm

5x




4x



ø 8x30mm

Carry out this assembly step on both sides

11

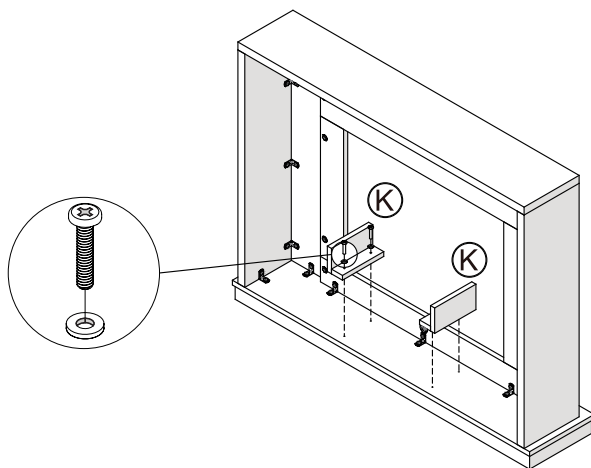

4x




M6x28mm

4x




Carry out this assembly step on both sides

12

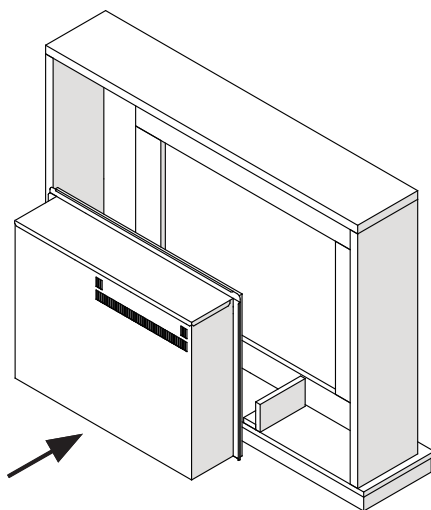


Rear side of the mantel

13

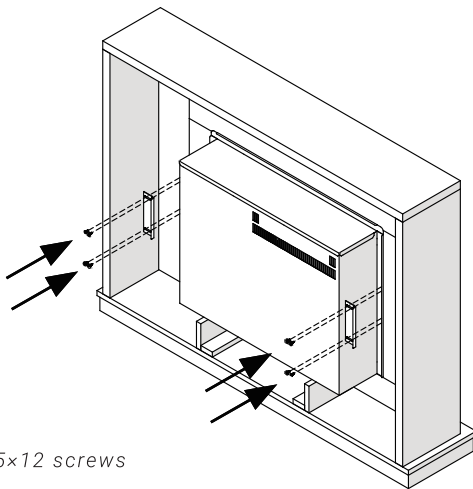

Use 8 pcs ST3.5×12 screws

14

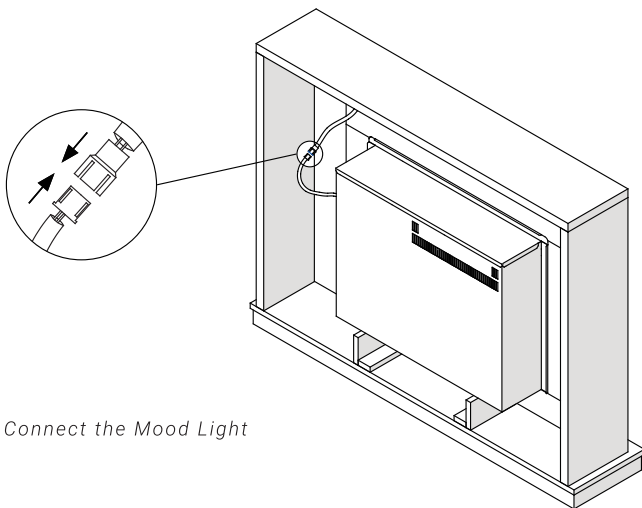

Connect the Mood Light