



FIREPLACE MANTEL

ASSEMBLY INSTRUCTIONS

EFRC380 Ruby

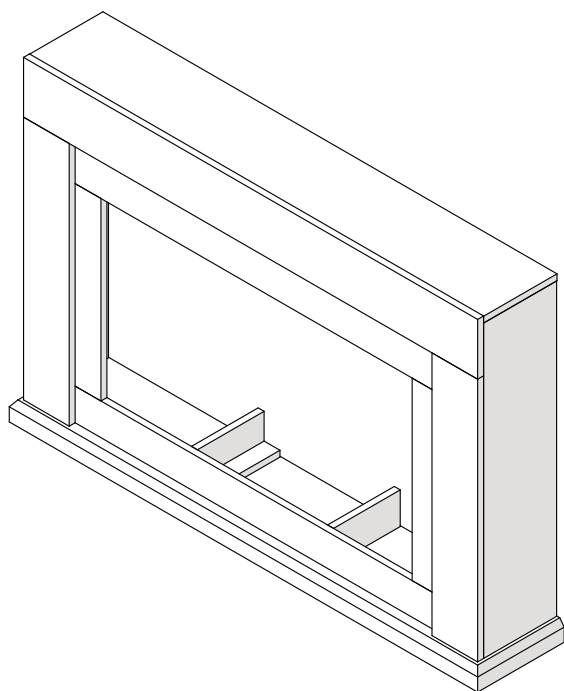


PARTS LIST

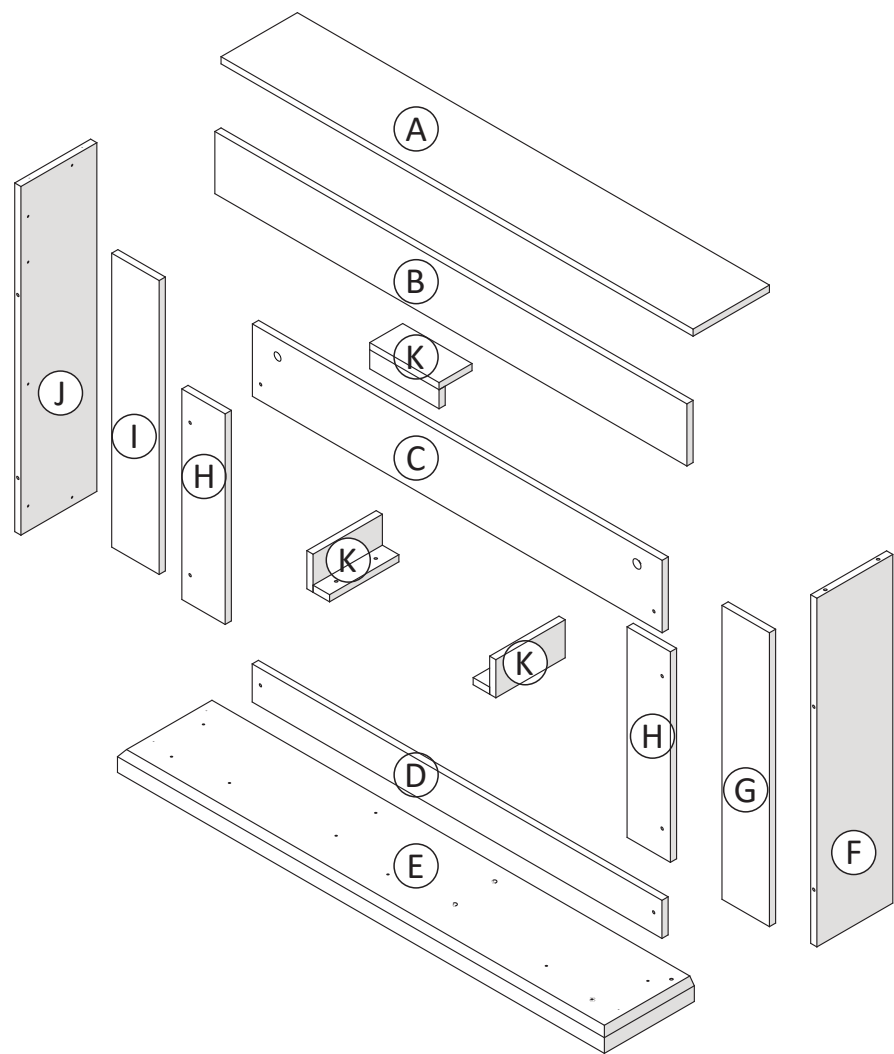








PARTS AND ACCESSORIES

Tools required:


A screwdriver will be needed.

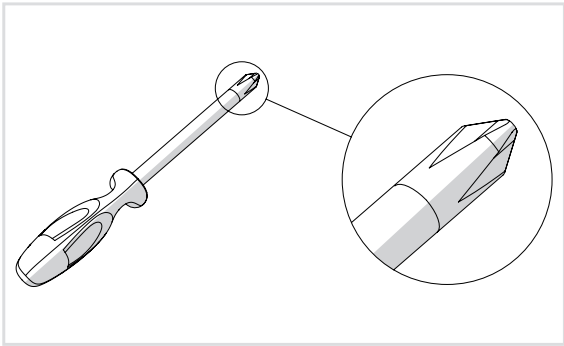

 47 x M6x12mm	 15 x M6x28mm	 13 x ø 8x30mm
 15 x	 22 x	 3 x
 6 x		



ASSEMBLY INSTRUCTIONS

01

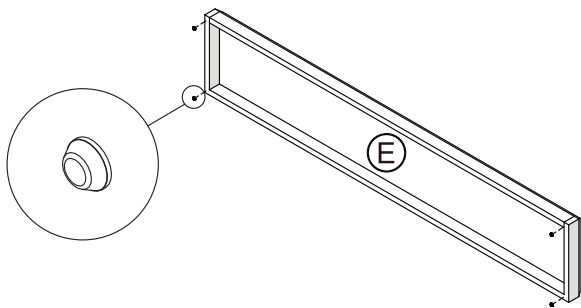


Carry out this assembly step on both sides

02

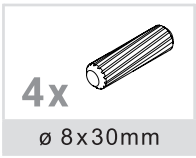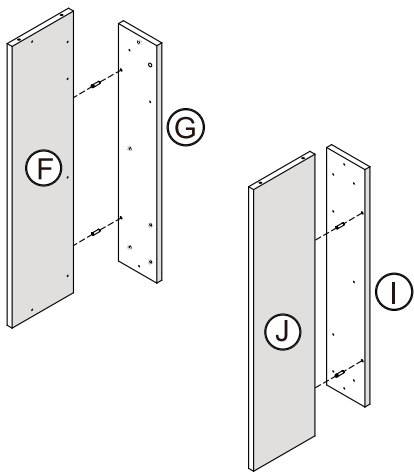

Carry out this assembly step on both sides

03

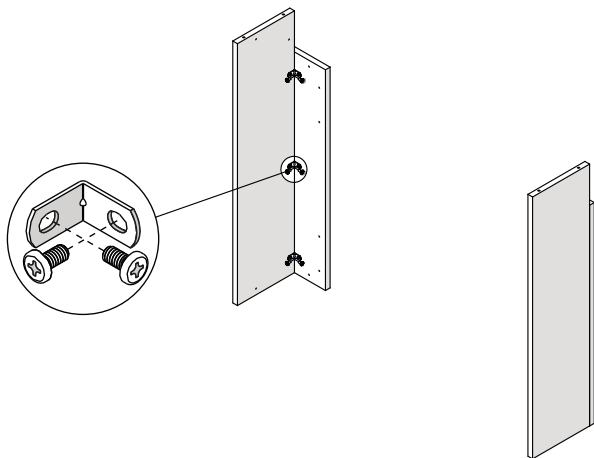

12x




M6x12mm

6x



Carry out this assembly step on both sides

04

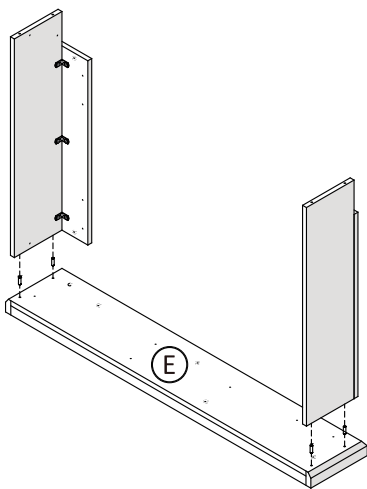


4x



Ø 8x30mm

Carry out this assembly step on both sides

05

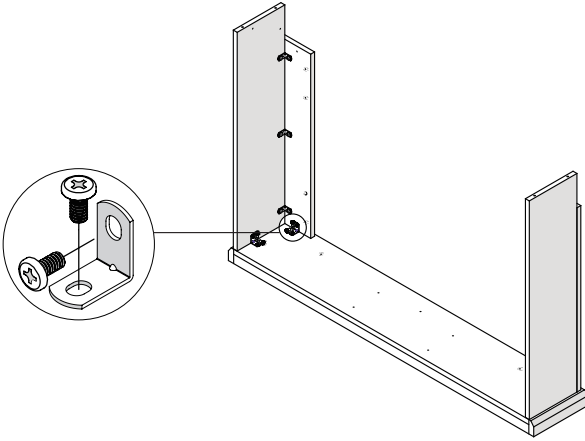

8 x




M6x12mm

4 x



Carry out this assembly step on both sides

06

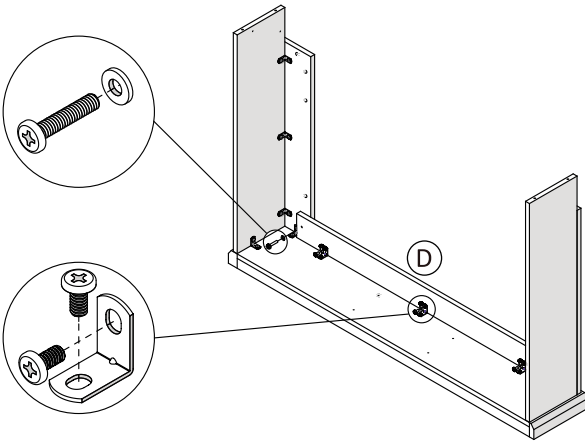

6 x



M6x12mm

2 x



M6x28mm

3 x





2 x




Carry out this assembly step on both sides

07

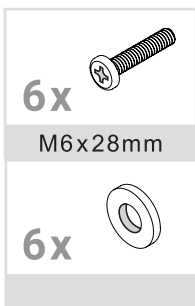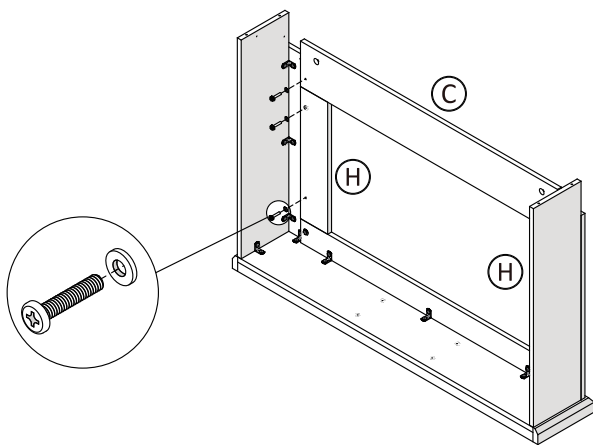


Carry out this assembly step on both sides

08

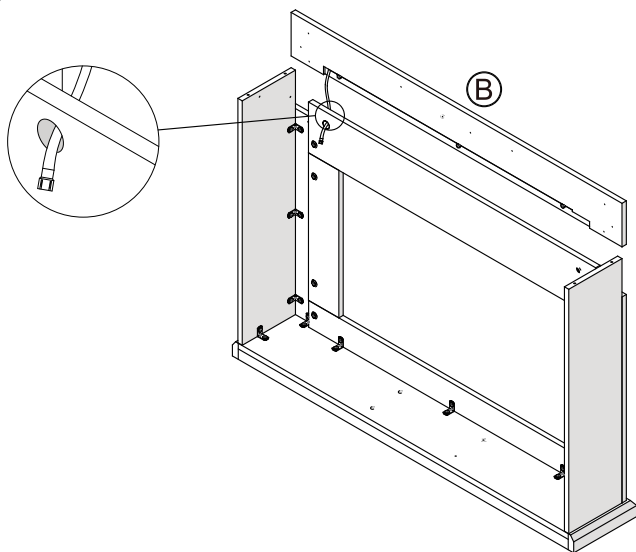

09

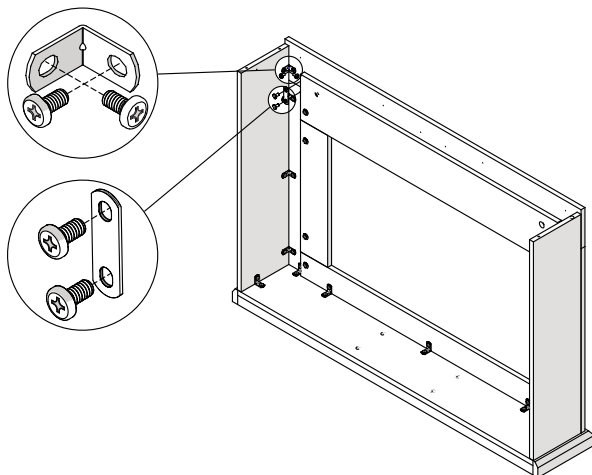

8x



M6x12mm

2x




2x



Carry out this assembly step on both sides

10

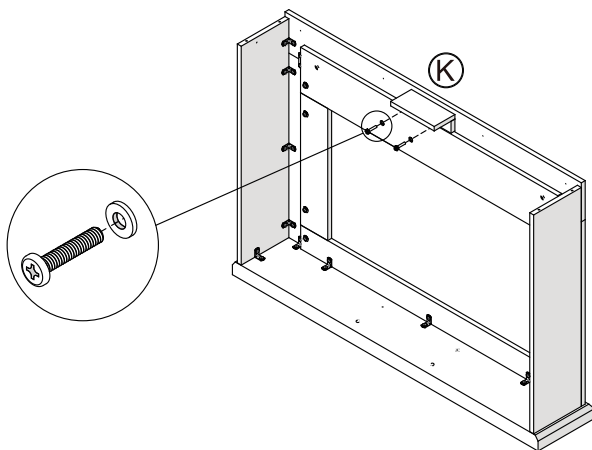

2x




M6x28mm

2x




Carry out this assembly step on both sides

11

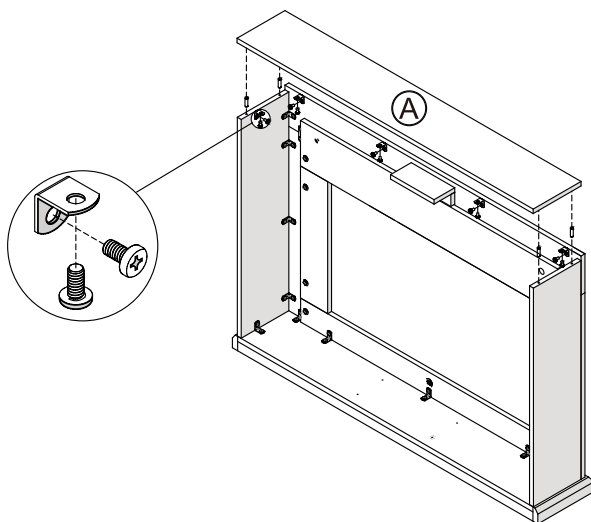

12x 


M6x12mm


6x 

4x 
ø 8x30mm

Carry out this assembly step on both sides

12

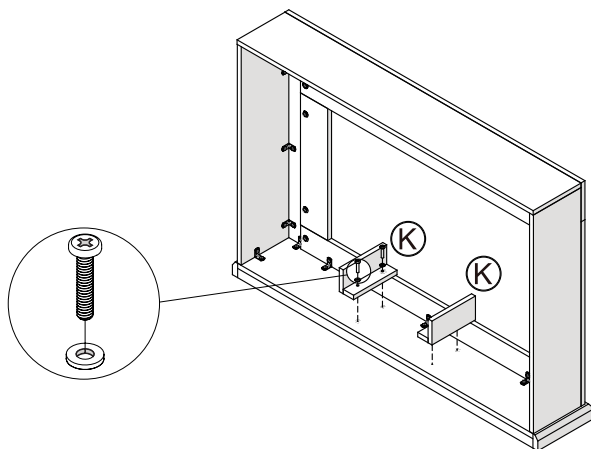


4x 

M6x28mm

4x 


Carry out this assembly step on both sides

13

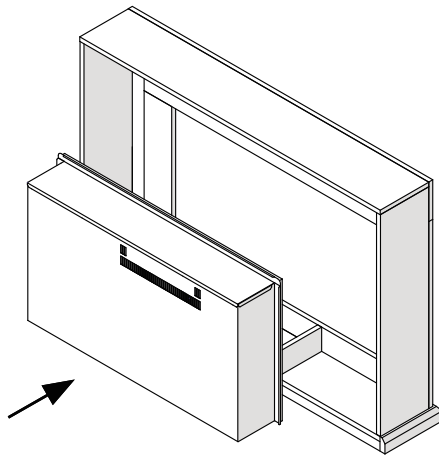


Rear side of the mantel

14

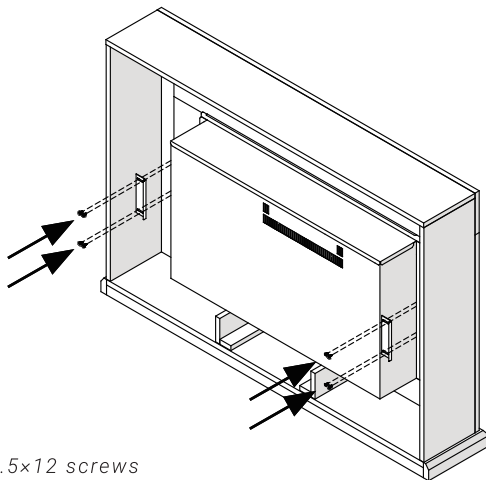

Use 8 pcs ST3.5×12 screws

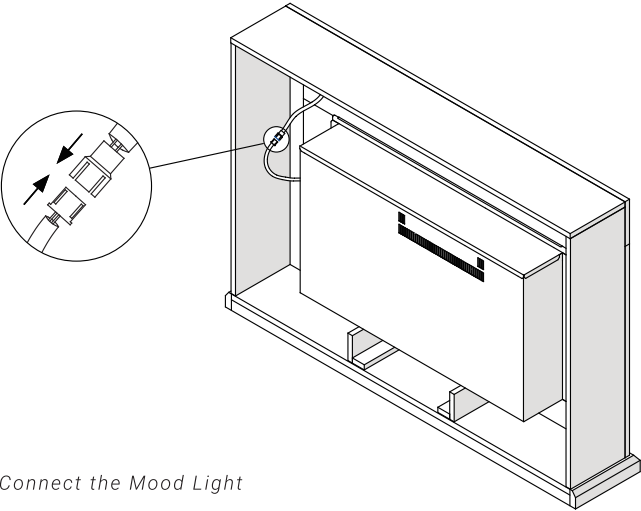

Connect the Mood Light